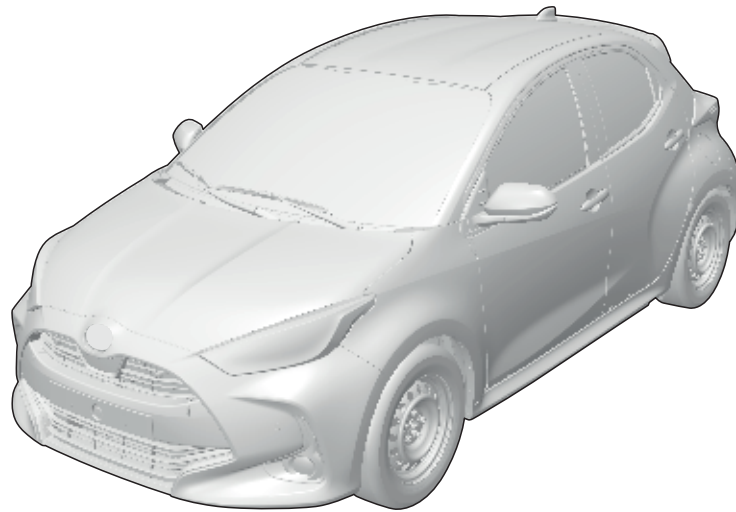




MAZDA

- GB** DOOR HANDLE PROTECTION FILM
Installation Instruction
- D** SCHUTZFOLIE FÜR TÜRGRIFFE
Einbauanleitung
- E** PELÍCULA DE PROTECCIÓN DE LA MANIJA DE LA PUERTA
Instrucciones de montaje
- F** FILM DE PROTECTION POIGNÉE DE PORTE
Instructions de montage
- I** PELLICOLA PROTETTIVA DELLA MANIGLIA DELLA PORTA
Istruzioni di montaggio
- P** PELÍCULA DE PROTEÇÃO DA MAÇANETA DA PORTA
Instruções de montagem
- NL** DEURKRUK BESCHERMFOLIE
Inbouw-instructie
- DK** BESKYTTESEFILM TIL DØRHÅNDTAG
Monteringsvejledning
- N** BESKYTTESEFILM TIL DØRHÅNDTAG
Monteringsveiledning

- S** SKYDDSFILM FÖR DÖRRHANDTAG
Monteringsanvisning
- SF** OVENKAHVAN SUOJAKALVO
Asennusohje
- CZ** OCHRANNÁ FÓLIE NA KLIKU DVEŘÍ
Návod k montáži
- H** AJTÓKILINCS VÉDŐFÓLIA
Beszerelési utasítás
- PL** FOLIA OCHRONNA POD KLAMKĘ
Instrukcja zabudowy
- GR** ΠΡΟΣΤΑΤΕΥΤΙΚΗ ΜΕΜΒΡΑΝΗ ΛΑΒΗΣ ΠΟΡΤΑΣ
Οδηγίες τοποθέτησης
- RUS** ПЛЕНКА ДЛЯ ЗАЩИТЫ ДВЕРНЫХ РУЧЕК
инструкция по установке
- SVK** OCHRANNÁ FÓLIA NA KĽUČKU DVEŘÍ
Návod na inštaláciu



MAZDA 2 HYBRID

ZV

Part Number: ZR74-V3-110

Date: 06-12-2021

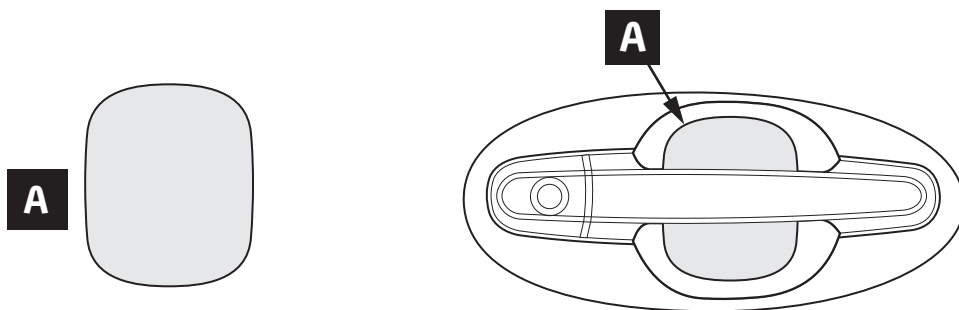
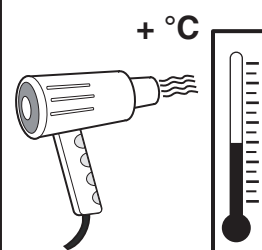
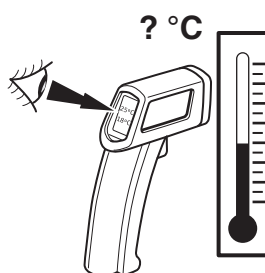
© Copyright MAZDA

Sheet 1 of 5

Expert Fitment Required
Montage durch Fachwerkstatt erforderlich
Montaje sólo por el concesionario
Montage par spécialiste nécessaire
E' necessario in officina specializzata
Especialista em montagem requerido
Montage door vakman nodig
Montage ved professionelt værksted påkrævet
Nødvendig med montering fra fagvevkersted
Verkstadsmontage erfordras
Asennus tarpeen merkkikorjaamossa
Montáž ve specializované dílně nutná
A szereléshez szakmúhely kell
Konieczny montaż przez warsztat specjalistyczny
Να τοποθετηθεί από εξουσιοδοτημένο συνεργείο
Необходима установка специалистами
Vyžaduje sa odborné vybavenie

KIT CONTENT**ZR74-V3-110****A**

2x

**TOOLS & CONSUMABLES & PPE**

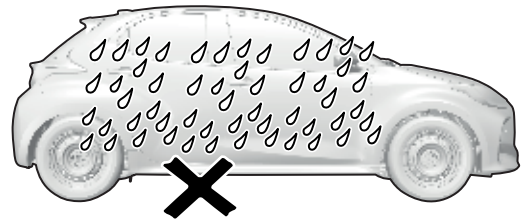
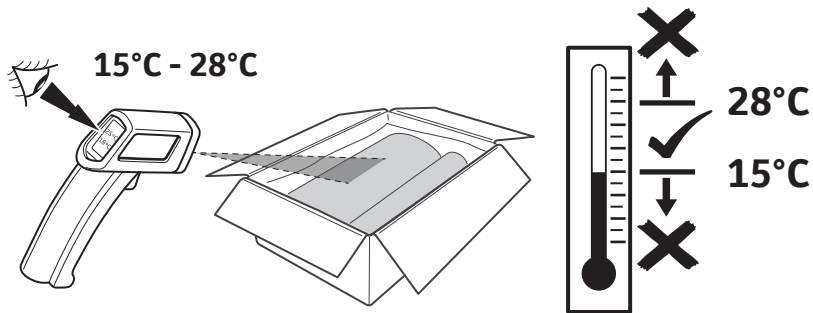
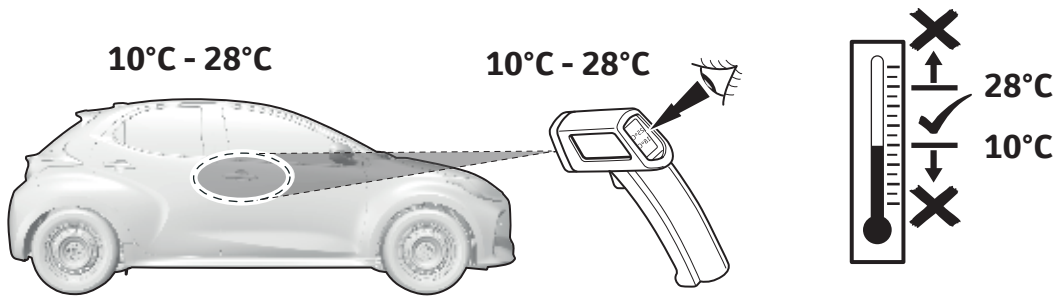
IMPORTANT INFORMATION



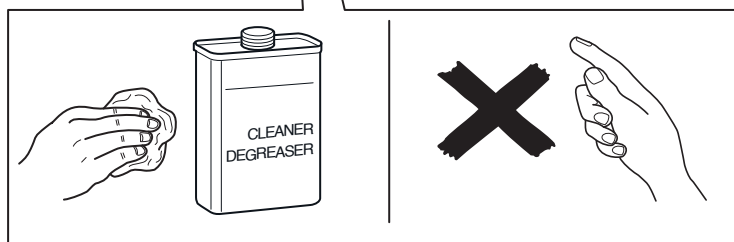
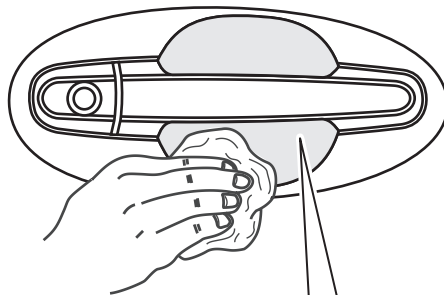
Material **S**afety **D**ata **S**heet

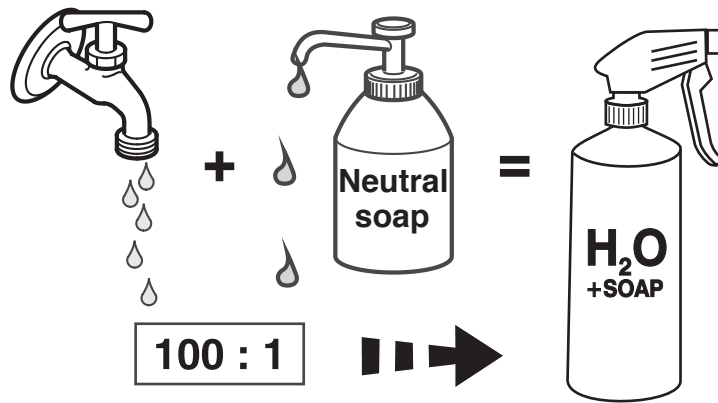
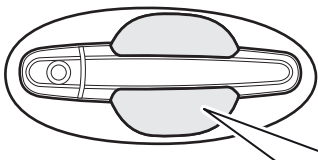


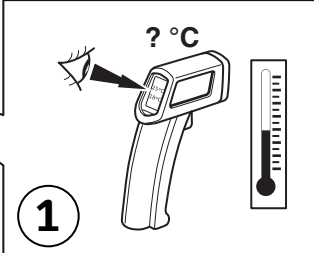
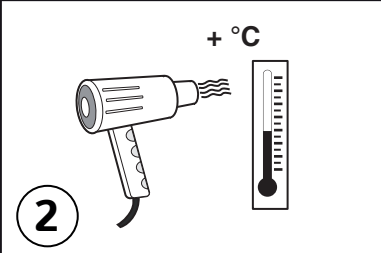
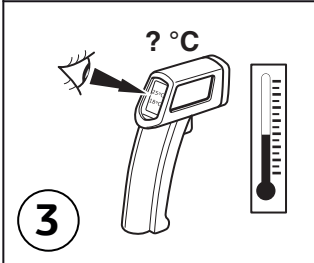



Technical **D**ata **S**heet

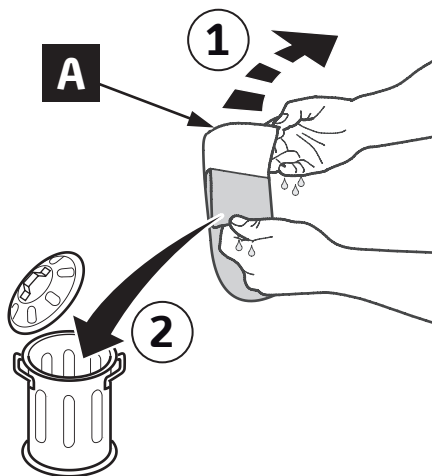
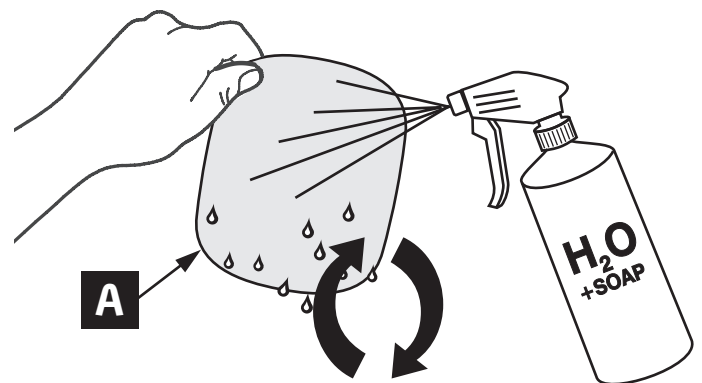


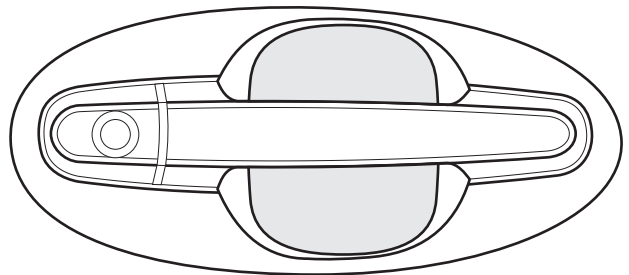
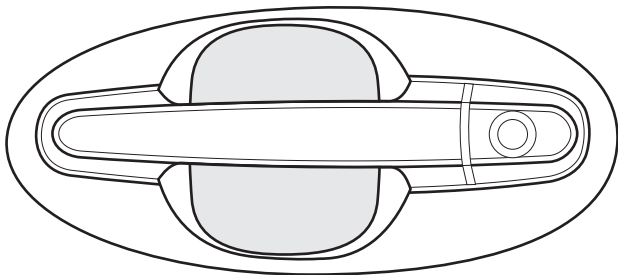
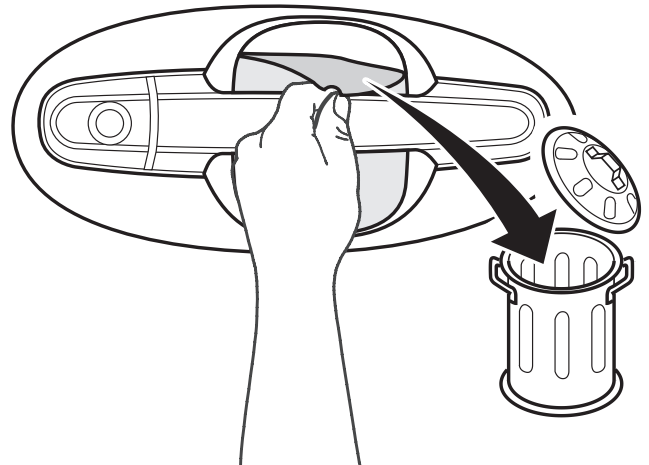
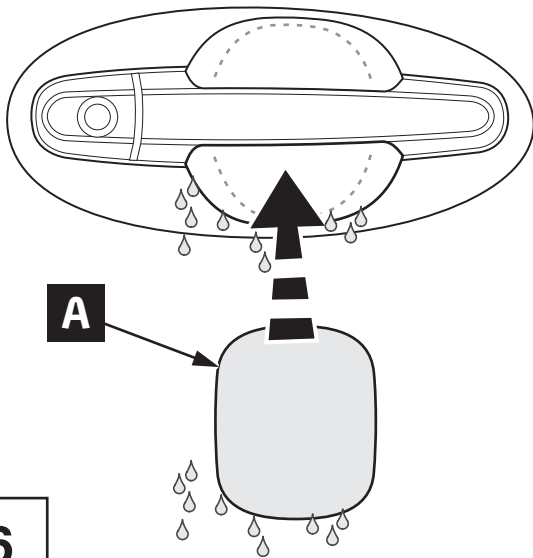
INSTALLATION INSTRUCTIONS




2


 <p>1</p>	<p>< 10°C → 2</p> <p>10°C - 28°C → 4</p>	 <p>2</p>
 <p>3</p>	<p>10°C - 28°C → 4</p>	<p>INFO</p> <p> 3 → 7</p> <p> ✓</p> <p> ✗</p>

3

4

5

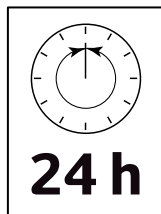
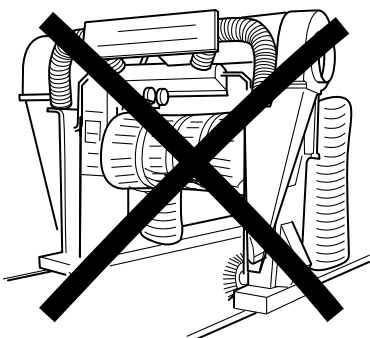
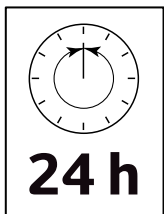


LHS = RHS

Fig. 1 - 7

8

INFORMATION



> 50 cm

